

ROGERBLACK

FITNESS

Gold Medal XT AG-14212



fit for life

with Roger Black



Dear Customer

We thank you for choosing your Roger Black Product and wish you every success during your training.

Please read the User Manual and operation instructions carefully prior to assembly and use, if you have questions please do not hesitate to contact us on the following number or web site:

Customer service +44 (0) 0845 600 0464

Website www.rogerblackfitness.co.uk

E-mail fitnessequipment.enquiries@argos.co.uk

Contents

Important Safety Instructions	2
Pre-assembly Notes	3
Assembly Steps	6
Computer Operation	11
Exploded Diagram	18
Parts List	20
Care & Maintenance	23
Stretching Routine	24
Limited Warranty	26

IMPORTANT SAFETY INSTRUCTIONS

Read all the instructions in this manual carefully before using your equipment

WARNING: Before beginning this or any exercise programme, consult your physician. This is especially important for persons who have not exercised regularly before or persons with pre-existing health problems. Read all instructions before using. Manufacturer assumes no responsibility for personal injury or property damage sustained by or through the use of this equipment.

1. It is the responsibility of the owner to ensure that all users of this equipment are adequately informed of all warnings and precautions.
2. Use the equipment only as described in this manual.
3. Place on a level and stable surface, with 2 meters of clearance around it. To protect the floor or carpet from damage, place a mat under this equipment.
4. Keep the equipment indoors, away from moisture or dust. Do not put the equipment in a garage, shed, outbuilding or covered patio, or near water. Failure to do this will invalidate your warranty and could cause serious safety problems.
5. Do not operate the equipment where aerosol products are used or where oxygen is being administered.
6. Keep children under the age of 12 and pets away from the equipment all the times.
7. The equipment should not be used by persons weighting more than 110kg. Serious injury may occur if the user weight exceeds the limit shown here.
8. The equipment complies with class HC of the standard EN957.
9. Never allow more than one person on the equipment at a time.
10. Wear appropriate exercise clothing when using the equipment. Do not wear loose clothing that could become caught in the equipment. Athletic support clothes are recommended for both men and women.
11. If you feel pain or dizziness while exercising, stop immediately and cool down.
12. The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of the heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.
13. This equipment is intended for home use only. Do not use in a commercial or institutional setting.

STORE THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE

PRE-ASSEMBLY NOTES

Open the Boxes

Make sure to inventory all of the parts that are included in the boxes. Check the Hardware Chart for a full count of the number of parts included for proper assembly. If you are missing any parts please call our Technical Support line 0845 600 0464

Gather Your Tools

Before starting the assembly of your unit, gather the necessary tools. Having all of the tools at hand will save time and make the assembly quick and hassle-free.


Clear Your Work Area

Make sure that you have cleared away a large enough space to properly assemble the unit. Make sure the space is free from anything that may cause injury during assembly. After the unit is fully assembled, make sure there is a comfortable amount of free area around the unit for unobstructed operation.



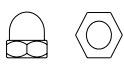
 
 


 





 


 





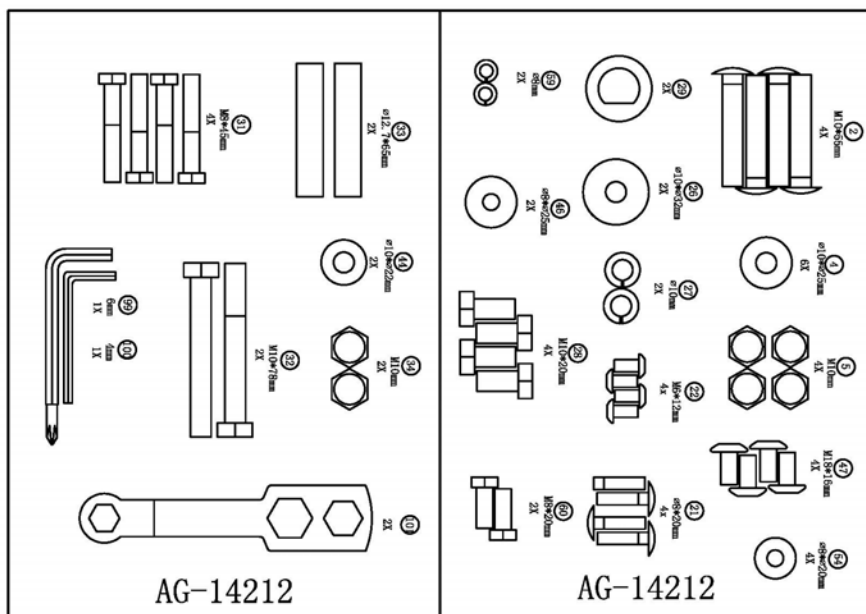
Hardware Chart

For your convenience, we have identified the hardware used in the assembly of this product. This chart is provided to help you identify those items that may be unfamiliar to you.

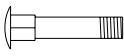If you find any parts missing, please call customer service line for help.




  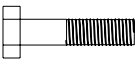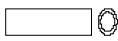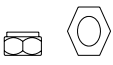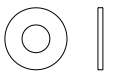HARDWARE PARTS LIST

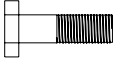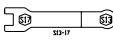NO	Description	Q'ty	Drawings	
2	Carriage bolt M10*55	4	 2	 4
4	Flat washer $\Phi 10 \times \Phi 25$	6		
5	Domed nut M10	4	 5	 21
21	Carriage bolt $\Phi 8 \times 20$	4		
22	Allen bolt M6*12	4	 22	 26
26	Flat washer $\Phi 10 \times \Phi 32$	2		
27	Spring washer $\Phi 10$	2	 27	 28
28	Hex head screw M10*20	4		
29	D type washer	2	 29	 31
31	Hex head bolt M8*45	4		
32	Hex head bolt M10*78	2	 32	 33
33	Sleeve $\Phi 12.7 \times 65$	2		
34	Nylon locknut M10	2	 34	 42
42	Club knob	4		
44	Flat washer $\Phi 10 \times \Phi 22$	2	 44	 46
46	Flat washer $\Phi 8 \times \Phi 25$	2		
47	Allen screw M8*16	4	 47	 54
54	Curve washer $\Phi 8 \times \Phi 20$	4		
59	Spring washer $\Phi 8$	2	 59	 60
60	Hex head screw M8*20	2		
99	Allen Key L6	1	 99	 100
100	Allen Key L4	1		
101	Wrench S13,17	2	 101	

IF YOU'RE MISSING ANY PARTS PLEASE CALL TECHNICAL SUPPORT
ON 0845 600 0464 OR EMAIL: fitnessequipment.enquiries@argos.co.uk

PRE-ASSEMBLY CHECK LIST

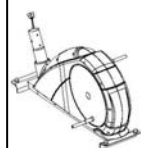

NO. 1



NO. 6



NO. 3



NO. 48L/R



NO. 10



NO. 11



NO. 12/13



NO. 9



NO. 41L/R



NO. 52/53



NO. 39/40



NO. 37/38



NO. 43



NO. 36/35



NO. 49/24


PART NO.	DESCRIPTION	Q'TY
1	Main Frame	1
6	Front stabilizer	1
3	Rear Stabilizer	1
48L/R	Pedal L/R	2
10	Computer	1
11	Stationary handlebar	1
12/13	Upper handlebars L/R	2
9	Handlebar post	1
41L/R	Pedal tube L/R	2
52/53	Lower handlebar L/R	2
39/40	Front & rear bottom handlebar cover	2
37/38	Front pedal tube cover L/R	2
43	Rear pedal tube cover L & R	2
35/36	Front & rear top handlebar cover	2
24/49	Front & rear stationary handlebar cover	2
	Hardware pack	1
	Manual	1

ASSEMBLY

Step 1

Attach the front stabilizer (6) to the front of the main frame (1) secure with two carriage bolts (2), two flat washers (4), and two domed nuts (5).


Attach the rear stabilizer (3) to the rear of the main frame (1) secure with two carriage bolts (2), two flat washers (4), and two domed nuts (5).

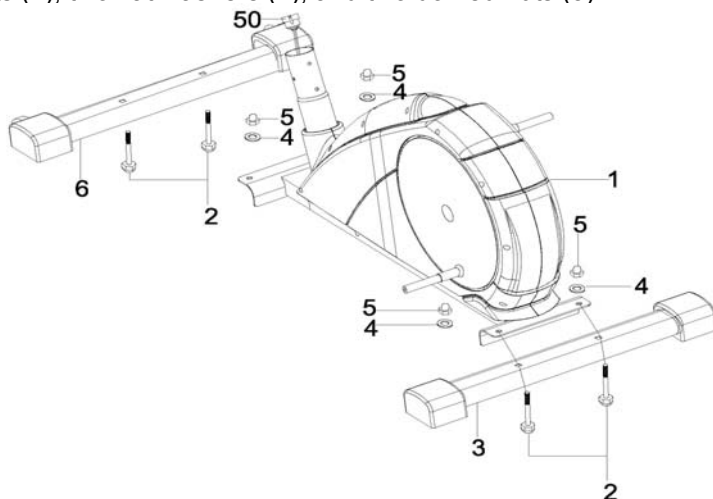

Step 2

Connect the middle computer wire (51) from the handlebar post (9) to the lower computer wire (50). (See insert)

Insert the handlebar post (9) into the main frame (1). Secure by using four allen screws (47) and four curved washers (54).

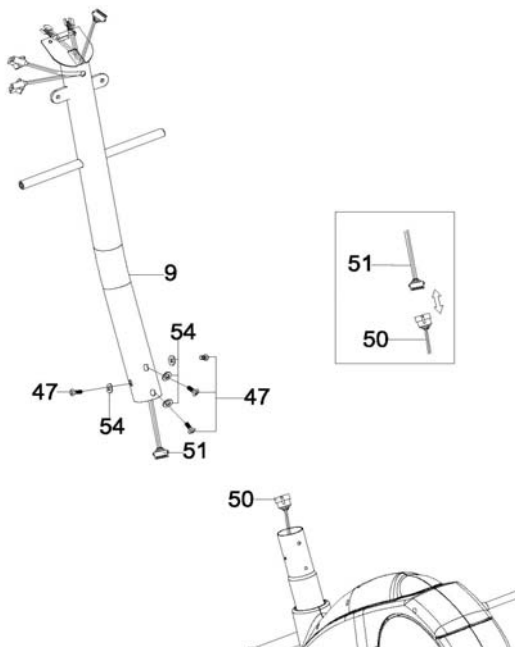


Step 3

Attach the lower left handlebar (52) to the left side axle of the handlebar post (9). Secure by using D type washer (29), one flat washer (26), one spring washer (27), one hex head screw (28).

Repeat for the bottom right handlebar (53).

Attach the upper left handlebar (12) to the lower left handlebar (52). Secure by using two carriage bolts (21) and two allen bolts (22).

Repeat for the upper right handlebar (13).

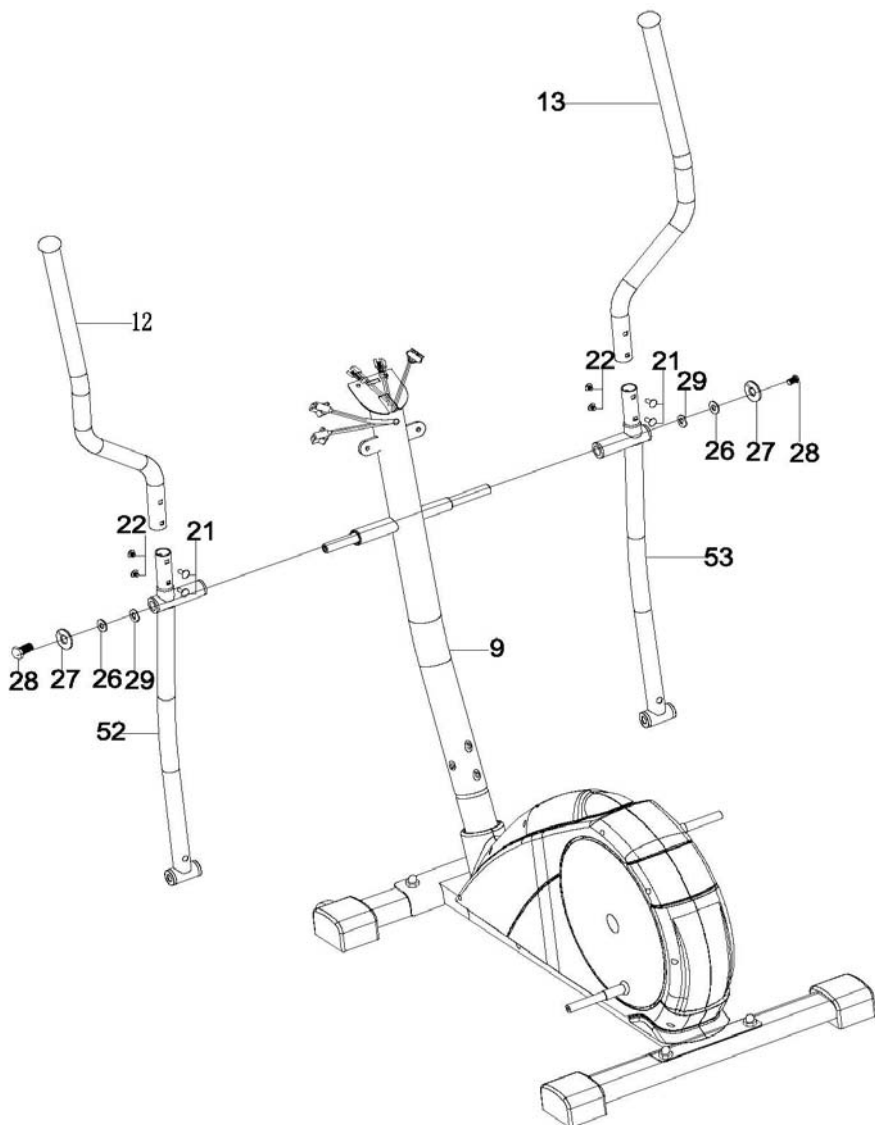

Step 4

Attach the rear of left pedal tube (41R) to the left run disc. Secure by using one hex head screw (60), one spring washer (59) and one flat washer (46).


Repeat for the right pedal tube (41R).

Attach the left pedal tube (41L) to the lower left handlebar (52). Slide the sleeve (33) into the left pedal tube and the lower left handlebar. Secure by using one hex head bolt (32), one flat washer (44), one nylon locknut (34).

Repeat for the right pedal tube (41R).

Attach the Left pedal (48L) to the left pedal tube (41L). Secure in your desired position using two hex head bolts (31) and two club knobs (42).


Repeat for the Right pedal (48R).

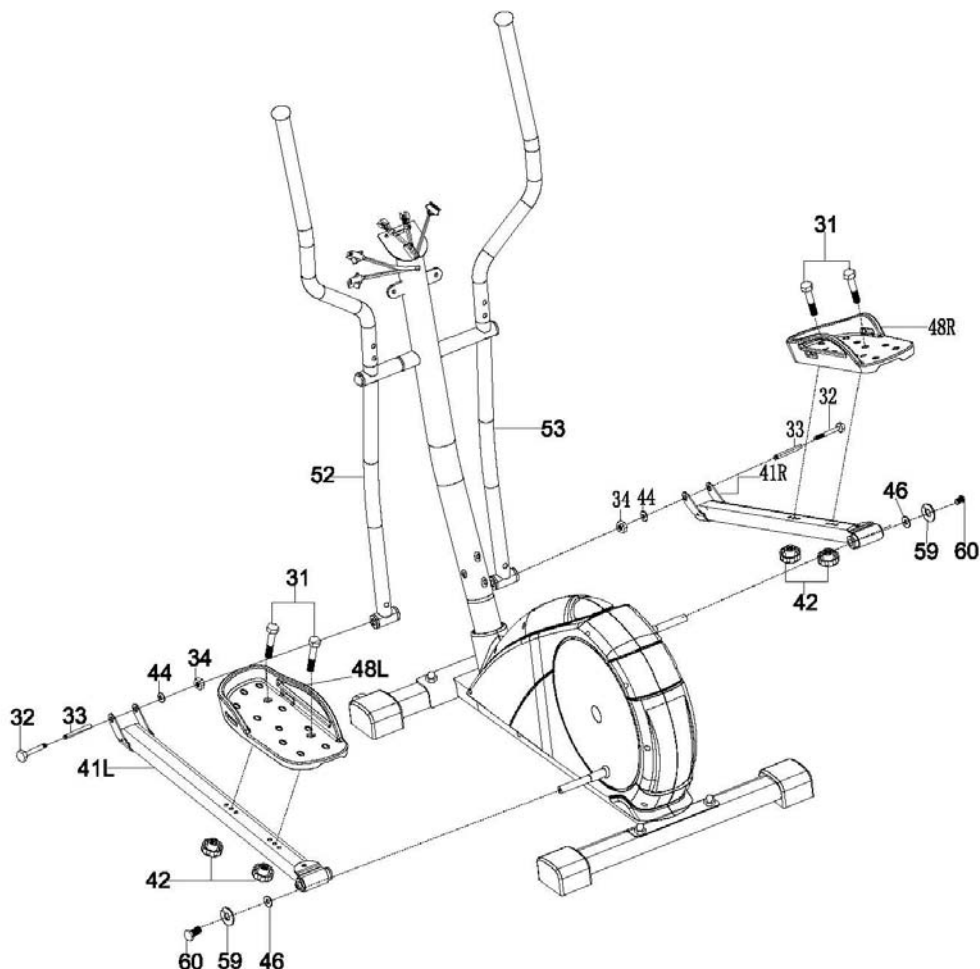

Step 5

Connect the upper hand pulse wires (56) to the extension hand pulse wires (55) from the hole of bracket. Connect the upper computer wire (57) to the middle computer wire (51). Attach the computer (10) to the bracket of the handlebar post (9). Secure by using two screws (20) which are pre-assembled on the back of computer.


Note: It will be necessary to move the wires around the handlebar post and away from the monitor bracket to avoid pinching the wires.

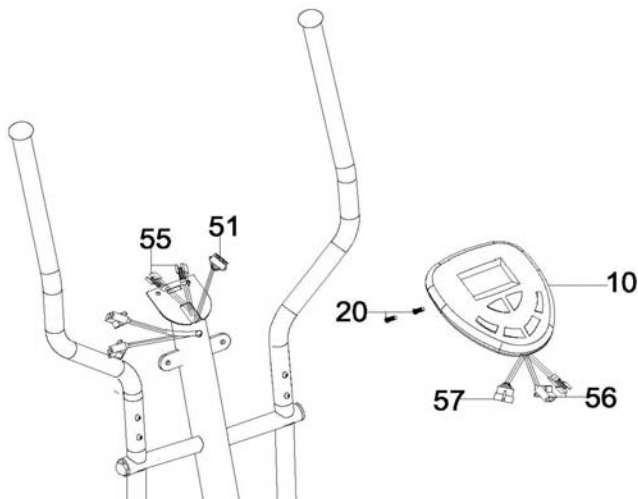

Step 6

Loosen the screws (25), then attach the front stationary handle bar cover (24) to the stationary handlebar (11). Attach the stationary handlebar (11) to the back of the handlebar post (9). Secure by using two hex head screws (28) and two flat washers (4).

Connect the hand pulse wire (58) to the extension hand pulse wire (55) from the handlebar post. Then attach the rear stationary handlebar cover (49) to the handlebar post. Secure by using two screws (25) and two screws (45) which are pre-assembled on the covers.

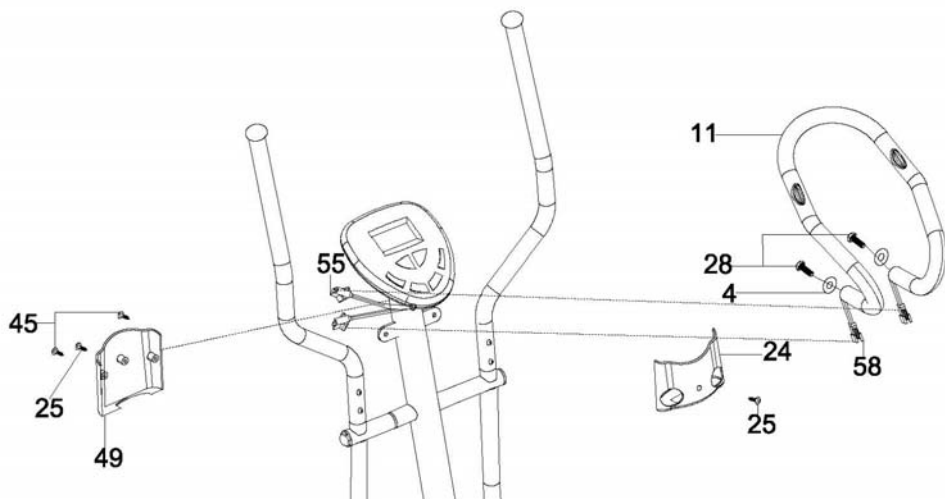


Step 7

Loosen the screws (23), attach the front top handlebar cover (35) and rear top handlebar cover (36) onto the joint of the top handlebar & bottom handlebar. Secure using two screws (23).

Loosen the screws (25) & (45), attach the left front pedal tube cover (37) and right front pedal tube cover (38) onto the joint of the bottom handlebar & pedal tube. Secure using two screws (25) and one screw (45).

Loosen the screws (30), attach the front lower handlebar cover (39) and rear bottom handlebar cover (40) to the bottom lower handlebar. Secure by using one screw (30).


Loosen the screw (25), attach the rear pedal tube cover (43) to the back of pedal tube. Secure by using one screw (25).

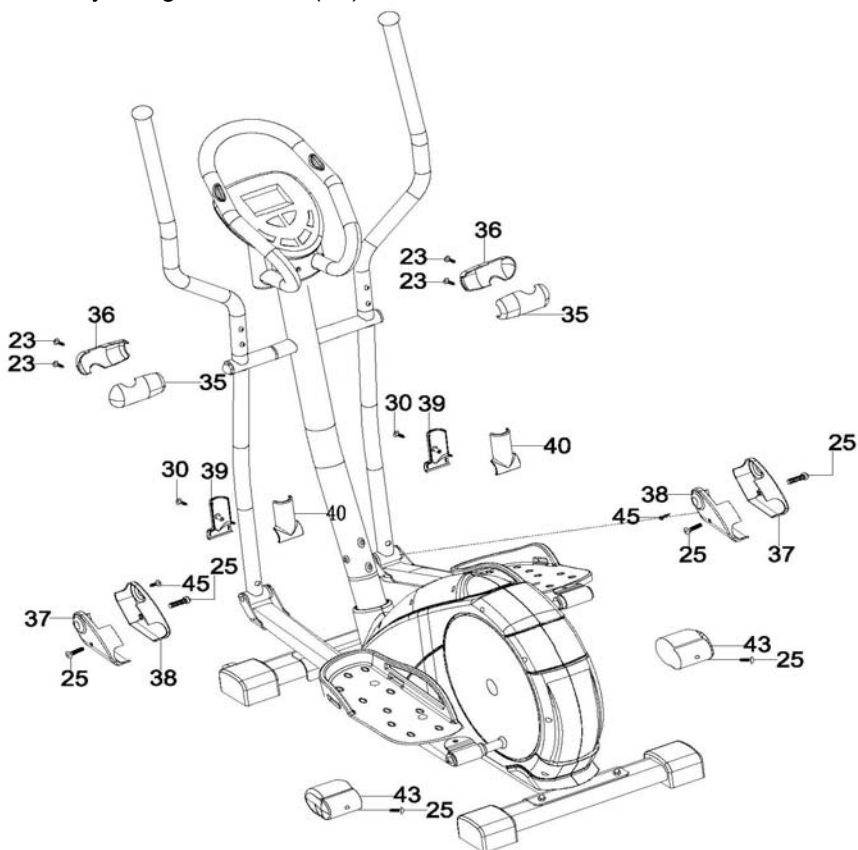

**Recheck all bolts and nuts are tightened securely
before using the machine.**

Computer Instructions

COMPUTER FRONT

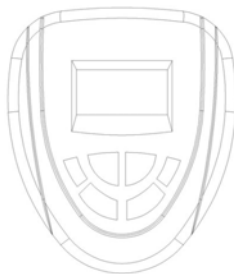

The things you should know before exercise

A. Input Power

Plug in the adaptor to the equipment then the computer will beep. Press STOP or ENTER to into the Manual mode.

B. Program select and setting value

1. Use the UP or DOWN keys to select program mode and then press ENTER to confirm your exercise mode.
2. At the Manual mode, use the UP or DOWN keys to set up your exercise TIME, DISTANCE, CALORIES, PULSE.
3. Press the START/STOP key to start exercise.
4. When you reach the set target, the computer will beep and then stop.
5. If you set up more than one target and you like to reach the next target, press START/STOP key to continue exercising.

C. Wake-Up Function

The monitor will enter SLEEP mode (LCD off) when there is no signal input and no key be pressed after around 4 minutes. Press any button on the screen to start the monitor.

Functions and Features:

1. **TIME:** Shows your workout time in minutes and seconds. Your computer will automatically count up from 0:00 to 99:59. You may also program your computer to count down from a setting value ranges 1:00 to 99:00 by using the UP and DOWN keys. If you continue exercising once the time has reached 0:00, the computer will begin beeping, and reset itself to the original time set, letting you know your workout is done.
2. **DISTANCE:** Displays the accumulated distance traveled during each workout up to a maximum of 99.90KM.
3. **SPEED:** Displays your workout speed value in KM per hour.
4. **RPM:** Revolution Per Minute
5. **WATT:** The amount of mechanical power the computer is receiving from your exercise.
6. **CALORIES:** Your computer will estimate the cumulative calories burned at any given time during your workout.

7. PULSE: Your computer displays your pulse rate in beats per minute during your workout.
8. AGE: Your computer is age-programmable from 10 to 99 years. If you do not set an age, this function will always default to age 35.
9. TARGET HEART RATE (TARGET PULSE): The heart rate you should maintain is called your Target Hear Rate in beats per minute.
10. PULSE RECOVERY: During the START stage, leave the both of your hands holding on grips and then press "PULSE RECOVERY" key, time starts count down from 00:60 - - to 00:00. As soon as 00:00 is reached, the computer will show your heart rate recovery status with the grade F1.0 to F6.0.

1.0 means OUTSTANDING

1.0 < F < 2.0 means EXCELLENT

2.0 ≤ F ≤ 2.9 means GOOD

3.0 ≤ F ≤ 3.9 means FAIR

4.0 ≤ F ≤ 5.9 means BELOW AVERAGE

6.0 means POOR

Note: If no pulse signal input then the computer will show "P" on the PULSE window. If the computer shows "ERR" on the message window, please re-press the PULSE RECOVERY key and please make sure your hands are placed firmly on the grips.

11. TEMPERATURE: Display the current temperature.

Key function:

There are 6 button keys and the function description as follows:

1. START/STOP key:
 - a. During the exercise mode, press the key to STOP exercise.
 - b. During the stop mode, press the key to START exercise.
2. UP key:
 - a. Press the key to increase the resistance during exercise mode.
 - b. During the setting mode, press the key to increase the value of Time, Distance, Calories, Age and select Gender and Program.
3. DOWN key:
 - a. Press the key to decrease the resistance during exercise mode.
 - b. During the setting mode, press the key to decrease the value of Time, Distance, Calories, Age and select Gender and Program.
4. ENTER key:
 - a. During the setting mode, press the key to accept the current data entry.
 - b. At the stop mode, by holding this key for over two seconds the user can reset all values to zero or default value.
 - c. During setting the Clock, press this key to accept the setting of hour and setting minute.
 - d. During exercise mode, press this key to Manual mode.
5. BODY FAT key: Press the key to input your HEIGHT, WEIGHT, GENDER and AGE then to measure your body fat ratio,
6. PULSE RECOVERY key: Press the key to activate heart rate recovery function.

Program Introduction & Operation:

Manual Program: Manual

P1 is a manual program. User can start exercise by pressing START/STOP key. The default resistance level is 5. Users may exercise in any desirous of resistance level (Adjusting by UP/DOWN keys during the workout) with a period of time or a number of calories or a certain distance.

Operations:

1. Use UP/DOWN keys to select the MANUAL (P1) program.
2. Press the ENTER key to enter MANUAL program.
3. The TIME will flash and you can press UP or DOWN keys to set your exercise TIME. Press ENTER key to confirm your desired TIME.
4. The DISTANCE will flash and you can press UP or DOWN keys to set your target DISTANCE. Press ENTER key to confirm your desired DISTANCE.
5. The CALORIES will flash and you can press UP or DOWN keys to set your exercise CALORIES. Press ENTER key to confirm your desired CALORIES.
7. Press the START/STOP key to begin exercise.

Preset Program: Steps, Hill, Rolling, Valley, Fat Burn, Ramp, Mountain, Intervals, Random, Plateau, Fartlek, Precipice Program

PROGRAM 2 to PROGRAM 13 are the preset programs. Users can exercise with different level of resistance in different intervals as the profiles show. Users may exercise in any desirous of resistance level (Adjusting by UP/DOWN keys during the workout) with a period of time or a number of calories or a certain distance.

Operations:

1. Use UP/DOWN keys to select one of the above programs from P2 to P13.
2. Press the ENTER key to enter your workout program.
3. The TIME will flash and you can press UP or DOWN keys to set your exercise TIME. Press ENTER key to confirm your desired TIME.
4. The DISTANCE will flash and you can press UP or DOWN keys to set your target DISTANCE. Press ENTER key to confirm your desired DISTANCE.
- 5 The CALORIES will flash and you can press UP or DOWN keys to set your exercise CALORIES. Press ENTER key to confirm your desired CALORIES.
6. The PULSE will flash and then you can press UP or DOWN keys to set your exercise PULSE. Press ENTER key to confirm your desired Pulse.
7. Press the START/STOP key to begin exercise.

User Setting Program: User 1, User 2

Program 14 and 15 are the user setting program. Users are free to create the values In the order of TIME, DISTANCE, CALORIES and the resistance level in 10 columns. The values and profiles will be stored in the memory after setup. Users may also change the ongoing loading in each column by UP/DOWN keys, and they will not change the resistance level stored in the memory.

Operations:

1. Use UP/DOWN keys to select the USER program from P14 to P15.
2. Press the ENTER key to enter your workout program.
3. The 1st column will flash, use the UP/DOWN keys to create your personal exercise profile. Press ENTER to confirm your first column of exercise profile. The default level is load 1.
4. Then column 2 will flash, use the UP/DOWN keys to create your personal exercise profile. Press ENTER to confirm your second column of exercise profile.
5. Follow the above description 5 and 6 to finish your personal exercise profiles. Press ENTER to confirm your desired exercise profile.
6. The TIME will flash and you can press UP or DOWN keys to set your exercise TIME. Press ENTER key to confirm your desired TIME.
7. The DISTANCE will flash and you can press UP or DOWN keys to set your target DISTANCE. Press ENTER key to confirm your desired DISTANCE.
8. The CALORIES will flash and you can press UP or DOWN keys to set your exercise CALORIES. Press ENTER key to confirm your desired CALORIES.
9. The PULSE will flash and then you can press UP or DOWN keys to set your exercise PULSE. Press ENTER key to confirm your desired Pulse.
10. Press the START/STOP key to begin exercise.

Body Fat Program: Body Fat

Program 16 is a special program for calculate users' body fat ratio and offer a specific resistance profile for users. There are 3 body types divided according to the FAT% calculated.

Type1: BODY FAT% is more than (>) 27

Type2: $27 \geq \text{BODY FAT\%} \geq 20$

Type3: BODY FAT % is less than (<) 20

The computer will show the test results of FAT PERCENTAGE, BMI and BMR.

Operations:

1. Use UP/DOWN keys to select the BODY FAT (P24) program.
2. Press the ENTER key to enter your workout program.
3. The HEIGHT will flash and you can press UP or DOWN keys to set your HEIGHT. Press ENTER key to confirm your HEIGHT. The default HEIGHT is 170cm or 5'07" (5 feet 7 inches).
4. The WEIGHT will flash and you can press UP or DOWN keys to set your WEIGHT. Press ENTER key to confirm your WEIGHT. The default WEIGHT is 70kgs or 155 lbs.
5. The GENDER will flash and you can press UP or DOWN keys to select your sex. Number 1 means male and number 0 means female. Press ENTER key to confirm your Gender. The default sex is 1 (MALE).
6. The AGE will flash and you can press UP or DOWN keys to set your AGE. Press ENTER key to confirm your AGE. The default AGE is 35.
7. Press the START/STOP key to begin body fat measurement. If the window shows E, please make sure that the palm of your hands are on the pulse grips. Then press the START/STOP key again to begin body fat measurement.

8. After finished your measurement, the computer will show the values of FAT PERCENTAGE, BMI and BMR on the LCD display. Furthermore, the computer will show your own exercise profile for your body type.

9. Press START/STOP key to begin exercise.

Operation guide:

1. Sleep Mode:

The computer will enter the sleep mode when there is no signal input and no keys are pressed around 4 minutes. You can press any key to wake up the computer.

2. BMI (Body Mass Index): BMI is a measure of body fat based on height and weight that applies to both adult men and women.

3. BMR (Basal Metabolic Rate): Your Basal Metabolic Rate (BMR) shows the number of calories your body needs to operate. This doesn't account for any activity, it's simply the energy needed to sustain a heartbeat, breathing and normal body temperature. It measures the body at rest, not sleep, at room temperature.

Error Message:

E1 (ERROR 1):

Normal state: During workout, If the monitor does not receive the count signal from the gear motor for more than 4 seconds and after it has checked successively 3 times then the LCD will show E1.

Power on state: The gear motor will return to zero automatically, when the signal of motor cannot be detected for more than 4 seconds then the gear motor's driver will be cut off immediately and show the E1 on the LCD display. All the other digital and function mark are blank, and the output signals are cut off also.

E2 (ERROR 2): When the monitor read the memory data, if the I.D. code is not correct or the memory IC damages then the monitor will show E2 immediately at power on.

E3 (ERROR 3): After 4 seconds by start mode, the computer detects the faulty motor did not leave the zero point then the LCD bar displays "E3".

Technical data of the current adapter


Available for Input: 230V/50Hz or 60Hz Output: 6V AC/0.5A

LCD Workout Graphics

PRESET PROGRAM PROFILES:


PROGRAM 1

 MANUAL




PROGRAM 2

 STEPS




PROGRAM 3

 HILL




PROGRAM 4

ROLLING

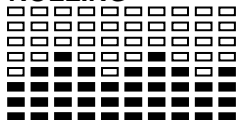


PROGRAM 7

 RAMP




PROGRAM 10

RANDOM

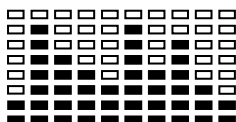


PROGRAM 13

PRECIPICE

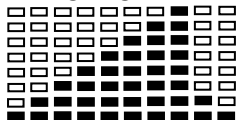


PROGRAM 5

VALLEY

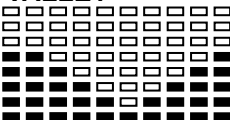


PROGRAM 8

 MOUNTAIN




PROGRAM 11

PLATEAU

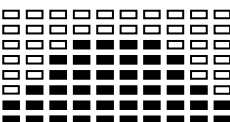


PROGRAM 6

FAT BURN

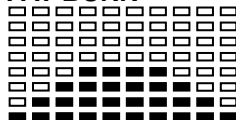


PROGRAM 9

 INTERVALS



PROGRAM 12



FARTLEK

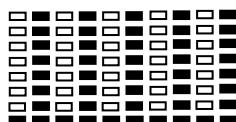

USER SETTING PROGRAM



PROGRAM 14

USER 1

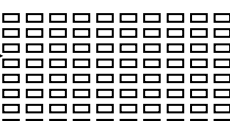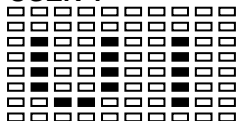



PROGRAM 15

USER 2

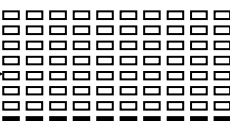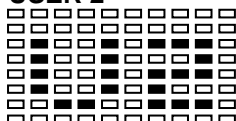

PROGRAM 16

 BODY FAT (START MODE)

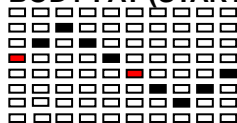

One of the Following Six Profiles Will Display Automatically after Measuring Your BODY FAT:

Workout Time: 40 minutes

Workout Time: 40 minutes

Workout time: 20 minutes


Workout Time: 40 minutes

Workout Time: 40 minutes

Workout time: 20 minutes


EXPLODED DRAWING

Many of the parts shown here have been pre-assembled at the factory.

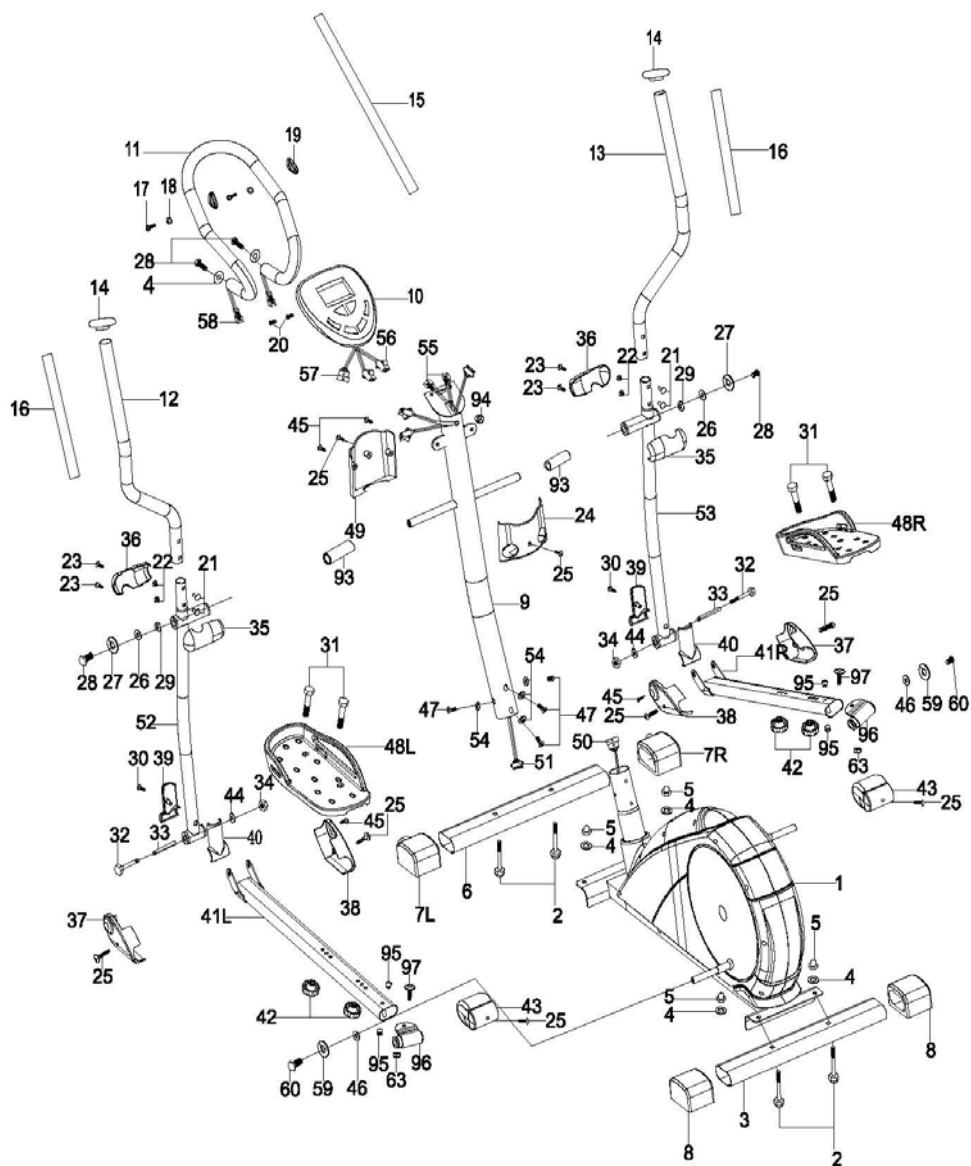

EXPLODED DRAWING

Many of the parts shown here have been pre-assembled at the factory.

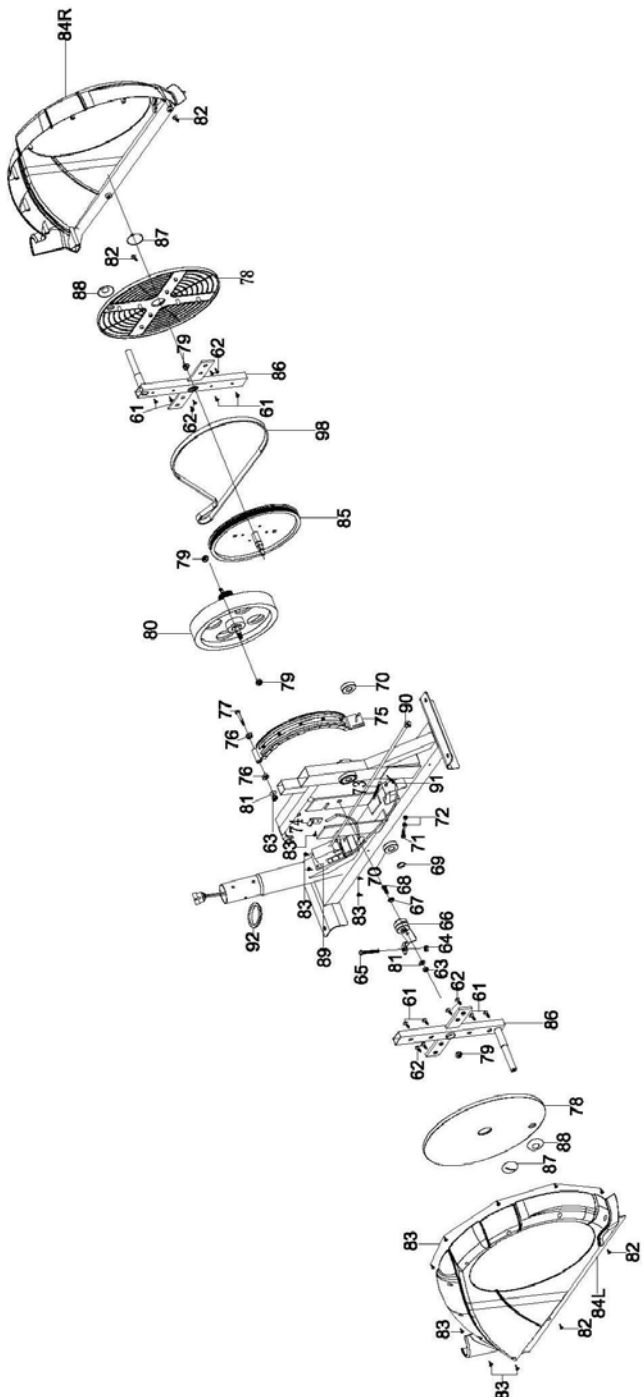

PARTS LIST

Part No.	Description	Qty
1	Main frame	1
2	Carriage bolt M10*55	4
3	Rear stabilizer	1
4	Flat washer $\Phi 10 \times \Phi 25$	6
5	Domed nut M10	4
6	Front stabilizer	1
7L	Transportation wheel left	1
7R	Transportation wheel right	1
8	Leveling end cap	2
9	Handlebar post	1
10	Monitor	1
11	Stationary handlebar	1
12	Top handlebar left	1
13	Top handlebar right	1
14	End cap	2
15	Foam grip for stationary handlebar	1
16	Foam grip	2
17	Screw ST4*20	2
18	Flat washer $\Phi 12 \times \Phi 4.2$	2
19	Hand pulse sensor	2
20	Screw M5*10	2
21	Carriage bolt $\Phi 8 \times 20$	4
22	Allen bolt M6*12	4
23	Screw ST4*16	4
24	Front stationary handlebar cover	1
25	Screw M5*10	8
26	Flat washer $\Phi 10 \times \Phi 32$	2
27	Spring washer $\Phi 10$	2
28	Hex head screw M10*20	4
29	D type washer	2
30	Screw ST4*30	2
31	Hex head bolt M8*45	4
32	Hex head bolt M10*78	2
33	Sleeve $\Phi 12.7 \times 65$	2
34	Nylon locknut M10	2

PARTS LIST

Part No.	Description	Qty
35	Front top handlebar cover	2
36	Rear top handlebar cover	2
37	Front pedal tube cover L	2
38	Front pedal tube cover R	2
39	Front bottom handlebar cover	2
40	Rear bottom handlebar cover	2
41L	Pedal tube left	1
41R	Pedal tube right	1
42	Club knob	4
43	Rear pedal tube cover L & R	2
44	Flat washer $\Phi 10 \times \Phi 22$	2
45	Screw ST4*16	4
46	Flat washer $\Phi 8 \times \Phi 25$	2
47	Allen screw M8*16	4
48L	Left pedal	1
48R	Right pedal	1
49	Rear stationary handlebar cover	1
50	Lower computer wire	1
51	Middle computer wire	1
52	Bottom handlebar left	1
53	Bottom handlebar right	1
54	Curve washer $\Phi 8 \times \Phi 20$	4
55	Extension hand pulse wire	2
56	Upper hand pulse wire	2
57	Upper computer wire	1
58	Hand pulse wire	2
59	Spring washer $\Phi 8$	2
60	Hex head screw M8*20	2
61	Screw ST3.5*15	8
62	Screw ST3.5*10	8
63	Nylon locknut M8	4
64	Hex head nut M8	1
65	Allen bolt M8*55	1
66	Idler wheel assembly	1

PARTS LIST

Part No.	Description	Qty
67	Powder spacer	1
68	Allen bolt M8*20	1
69	Clip	2
70	Bearing	2
71	Hex head bolt M6*25	1
72	Hex head nut M6	2
73	Spring	1
74	Sensor bracket	1
75	Magnet assembly	1
76	Powder spacer	2
77	Hex head bolt M8*55	1
78	Run disc	2
79	France nut	4
80	Flywheel	1
81	Flat washer $\Phi 8 \times \Phi 17$	2
82	Screw ST5*15	4
83	Screw ST5*15	13
84L	Chain cover left	1
84R	Chain cover right	1
85	Pulley	1
86	Cross crank	2
87	Run disc cover	2
88	Bushing	2
89	Motor	1
90	Power wire	1
91	Motor wire	1
92	Inner cap for handlebar post	1
93	Plastic spacer	2
94	End cap for wire	1
95	Plastic spacer	4
96	U plate	2
97	Allen bolt M8*50	2
98	Belt	1

CARE & MAINTENANCE


Proper maintenance is very important to ensure your equipment is always in top working condition. Improper maintenance could cause damage or shorten the life of your equipment and exceed the WARRANTY coverage.

Important: Never use abrasives or solvents to clean the equipment. To prevent damage to the computer, keep liquids away and keep it out of direct sunlight.


After each workout: Wipe off the console and other frame surfaces with a clean, water dampened soft cloth to remove excess perspiration.

Inspect and tighten all parts of the equipment regularly. Replace any worn parts immediately.

Adjust the End cap

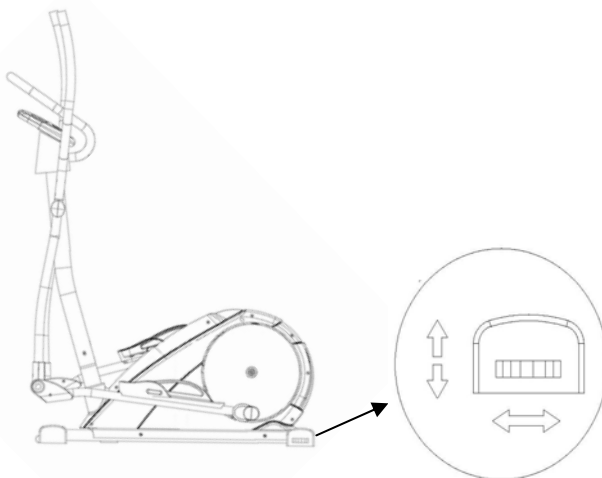

Transport

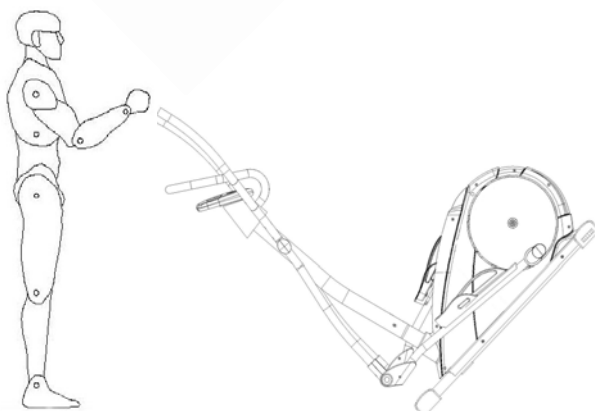


STRETCHING ROUTINE

Warm Up and Cool Down:

A successful exercise programme consists of a warm-up, aerobic exercise, and a cool-down. Warming up is an important part of your workout, and should begin every session. It prepares your body for more strenuous exercise by heating up and stretching out your muscles, increasing your circulation and pulse rate, and delivering more oxygen to your muscles. At the end of your workout, repeat these exercises to reduce sore muscle problems. We suggest the following warm-up and cool-down exercises:

Toe Touch:

Slowly bend forward from your waist, letting your back and shoulders relax as you stretch toward your toes. Reach down as far as you can and hold for 15 counts

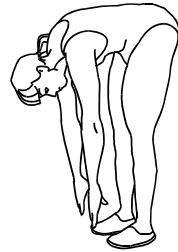

Shoulder Lift:

Lift your right shoulder up toward your ear for one count. Then lift your left shoulder up for one count as you lower your right shoulder.




Head Roll:

Rotate your head to the right for one count, feeling the stretch up the left side of your neck. Next, rotate your head back for one count, stretching your chin to the ceiling and letting your mouth open. Rotate your head to the left for one count, and finally, drop your head to your chest for one count.



Hamstring Stretch:

Sit with your right leg extended. Rest the sole of your left foot against your right inner thigh. Stretch toward your toe as far as possible. Hold for 15 counts. Relax and then repeat with left leg extended.

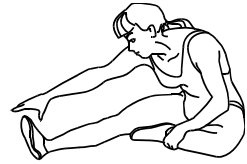


Side Stretch:

Open your arms to the side and continue lifting them until they are over your head. Reach your right arm as far upward toward the ceiling as you can for one count. Feel the stretch up your right side. Repeat this action with your left arm.



Calf-Achilles Stretch:

Lean against a wall with your left leg in front of the right and your arms forward. Keep your right leg straight and the left foot on the floor; then bend the left leg and lean forward by moving your hips toward the wall. Hold, and then repeat on the other side for 15 counts.

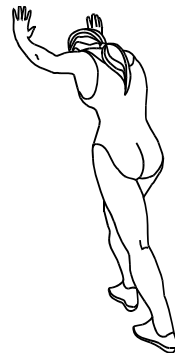

LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and material, under normal use and service conditions, for a period of two years from the date of purchase. This warranty extends only to the original purchaser. This warranty is limited to replacing or repairing, at the manufacturer's option, the product through one of its authorized service centres. All repairs for which warranty claims are made must be authorized by the manufacturer. This warranty does not extend to any product or damage to the product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an authorized service centre, products used for commercial or rental purposes, or products used as store display models. No other warranty beyond that specifically set forth above is authorized.

The manufacturer is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use of performance of the product or damages with respect to any economic loss, loss of property, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature.

Excluded from warranty are wearing parts and damages caused by misuse of the product. In case of claim please contact your specialist dealer. The warranty period starts at the date the product was purchased (please carefully retain your sales receipt). Our quality products have been designed and tested to meet the needs and requirements of a committed Fitness-Training of in-home use. This product is tested to the European Standard EN957

Customer Service: +44 (0) 0845 600 0464

To achieve the best support in case of a problem with your product, we would ask you to please quote the product Model Name and Serial Number.

These can be found on the sticker underside your product.

Model name: _____

Serial number: _____

Spare Parts Order:

If you require any parts for your machine please contact Technical Support on 0845 600 0464

Please have your machine serial number and production date to hand.

Waste Disposal

Please discard product in accordance with local environmental laws, regulations and WEEE directive.





Gold Medal XT AG-14212

User manual.

For information on the Roger Black Medal Series visit www.rogerblackfitness.co.uk

For technical support call the Roger Black Technical Support Line on 0845 600 0464, or email support@rogerblackfitness.co.uk